

# SPECIAL PROGRAMMING CODES

## JBE-AT1

CODE	DEVICE	
<b>INPUT MODULE</b>		
205	JBE-2120	<b>NC mode</b> in idle state (EOL 10K in series)
<b>OUTPUT MODULE</b>		
201	JBE-2125	<b>Enables</b> output module supervision
202	JBE-2125	<b>Disable</b> output module supervision
<b>OPTICAL DETECTOR</b>		
201	JBE-2111	<b>Enable</b> LED blinking
202	JBE-2111	<b>Disable</b> LED blinking
<b>HEAT DETECTOR</b>		
201	JBE-2106	<b>Enable</b> LED blinking
202	JBE-2106	<b>Disable</b> LED blinking
<b>SOUNDER LOOP</b>		
201	JBE-2235	Sound and Light
202	JBE-2235	Sound Only
204	JBE-2235	Sounder Tone (Fixed)
205	JBE-2235	Pulsed or Flashing Tone
208	JBE-2235	Default Configuration
<b>DETECTOR CONVENTIONAL</b>		
201	JBE-2107	<b>Enable</b> LED blinking (default)
202	JBE-2107	<b>Disable</b> blinking of led
211	JBE-2107	Sensitivity level 1 (default) - Standard Sensitivity
212	JBE-2107	Sensitivity level 2
213	JBE-2107	Sensitivity level 3
201	JBE-2112	<b>Enable</b> flashing of the LED (default)
202	JBE-2112	<b>Disable</b> LED blinking
211	JBE-2112	Sensitivity level 1 - Early Detection
212	JBE-2112	Sensitivity level 2 (default) - Standard Sensitivity
213	JBE-2112	Sensitivity level 3 - Sensitivity for unwanted alarms